



WILD BOAR SHIFT LINKAGE

1040

FITS ALL '86-UP SOFTAIL MODELS (EX. '97-'99 FLSTS), '93-'02 FXDWG, AND ALL '80-UP TOURING MODELS (DRESSERS, ROAD KINGS, ROAD GLIDE, STREET GLIDE, ETC.).

PARTS INCLUDED

- 1 Wild Boar Shift Linkage Assembly
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

WARNING! FAILURE TO ADJUST THE SHIFT LINKAGE ASSEMBLY PROPERLY MAY CAUSE DAMAGE TO MOTORCYCLE, WHICH COULD RESULT IN MACHINE MALFUNCTION OR PERSONAL INJURY.

CAUTION! Ensure that the installation of this product does not interfere with the proper operation of the motorcycle before riding.

ATTENTION! A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all steps in the procedure; consult a trained technician.

ATTENTION! It is the installer's responsibility to ensure all fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not warranty components lost due to improper installation. Periodic maintenance may be required.

NOTE Installation shown on a 2006 FLHTCUI and 2007 Softail Deluxe; while representative of typical procedure, there may be minor differences when installed on other models.

TOOLS SUGGESTED

Set of open-end wrenches; set of hex wrenches.



PROCEDURE

STEP 1 Park motorcycle on sturdy, level surface and shut off ignition.

STEP 2 Remove stock shift linkage; set aside for later. See PIC.1. (FLT model shown.)

STEP 3 Remove the four fasteners on the backside of the Wild Boar assembly to remove the new linkage from the cover. Save the fasteners for later use.

STEP 4 Lay stock shift linkage and Wild Boar Shift Linkage with the barrel joint studs across from each other. See PIC.2. (FLT model shown.)

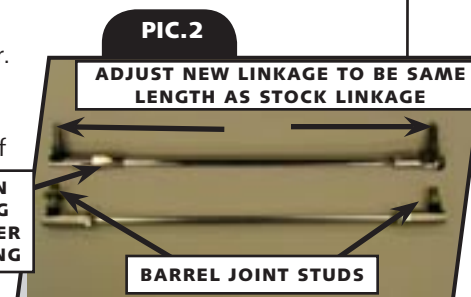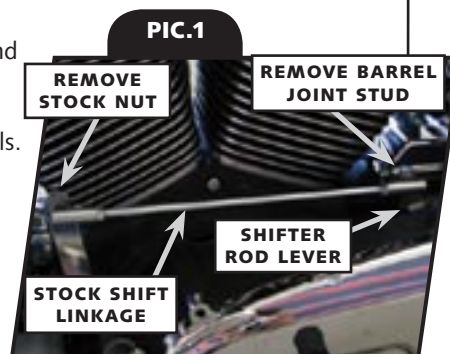

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Kuryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Kuryakyn product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Kuryakyn products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA All Rights reserved.



NOTE On most Softail models, the front barrel joint stud faces outward and includes an acorn nut. (Softail model shown in [PIC.3](#).)

STEP 5 Adjust new linkage to same length as stock linkage. Turn barrel joints in or out on the linkage threads to adjust. Tighten locking nut against barrel joint.

NOTE Each threaded end of the Wild Boar Shift Linkage must have at least three threads in barrel joint hole. Skip to STEP 11 if equal length cannot be attained; you will need to adjust the shift lever on the splined shaft.

STEP 6 Install Wild Boar cover onto new shift linkage. Center the cover on the linkage; re-install the four screws and tighten.

STEP 7 Ensure that barrel joint studs are perpendicular to the shift shaft.

STEP 8 Install rear barrel joint stud into threaded hole in the shifter rod lever.

STEP 9 Install front barrel joint stud into the hole in the splined shaft lever; install nut and tighten. See [PIC.4](#) and [PIC.8](#).

STEP 10 Check for proper clearance and operation.

TO ADJUST THE SPLINED SHIFT LEVER:

STEP 11 Remove bolt from stock shifter lever. See [PIC.5](#).






STEP 12 Pull shifter lever off splined shaft. See [PIC.6](#).

STEP 13 Install the rear barrel joint stud in the shifter rod lever; rotate splined shaft lever to match up with the front barrel joint stud of the shift linkage. See [PIC.7](#).

STEP 14 Align the splined shaft lever in the location that allows the front barrel joint to be perpendicular to the shift linkage; gently reinstall shift lever onto splined shaft.

STEP 15 Position the shift lever on the splines to ensure proper clearance and operation. Install stock bolt and tighten. Because of the coarse adjustment provided by the splined shaft, you may need to go back and readjust the shift linkage barrel joints to achieve proper clearance and operation.

STEP 16 Remove the new shift linkage and go back to STEP 6, above, to complete the installation.

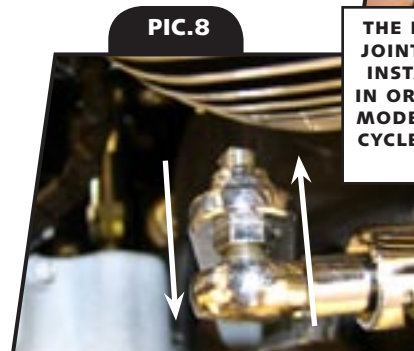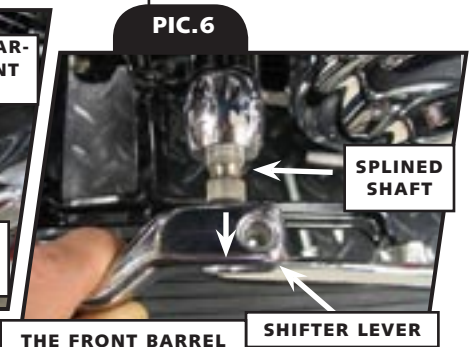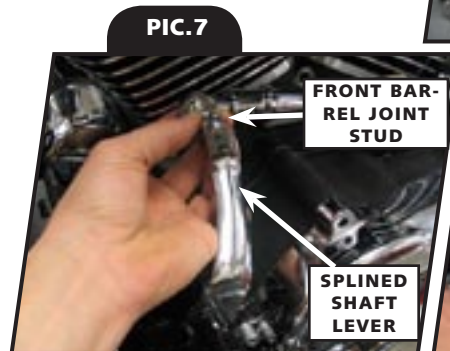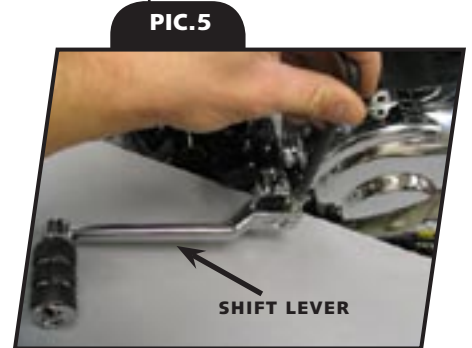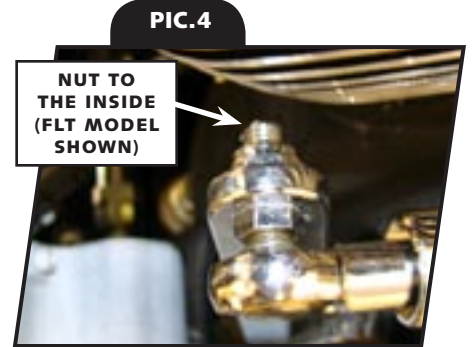

THE FRONT BARREL JOINT STUD CAN BE INSTALLED FACING IN OR OUT ON SOME MODELS OF MOTORCYCLES. (FLT MODEL SHOWN)

Ride On!